



CAMERA-READY APPROVAL CHECKLIST



Please Return Proof
& Signed Form to TEID

Creative Services

Project: _____ Account Number: _____

Client: _____ Division: _____

Account Manager: _____ Date: _____

To Printer: _____ Publication date: _____

✓ Place a check mark next to items listed below that were proofed and approved

NO Use this to indicate items that were missing or incorrect

N/A Use this for those that don't apply to the proof

CK NO N/A

Page Content

Captions/Quotes

Graphic Treatments

Logos

Folds, perforations

Images: cropping, size

Type proofed

Postal Indicia/codes/permits

CK NO N/A

Numbers

Color

Layout/Design

Trims, bleeds

Screens

Headlines/Subheads

Call outs

Phone numbers

CK NO N/A

URLS

Addresses

Crop/fold/trim marks

Registration tabs

Paper stock, weight

LBNL/PUB # _____

Other: _____

Other: _____

Quantity: _____ Ship to: _____ MS: _____ Ext: _____

This is to verify that I have thoroughly reviewed and approved the project materials described above. I understand that this is my last opportunity to request changes due to mistakes or preference. I further acknowledge that any mistakes or preference changes that were not discovered or specified at this time are not the responsibility of TEID. I authorize TEID to proceed with the approved materials listed above to the printer for the final phase of the project.

Client Approval Signature: _____ Date: _____


Beryllium Hazard Awareness at Berkeley Lab

Beryllium Safety Program

/ Environment, Health and Safety Division of
Ernest Orlando Lawrence Berkeley National Laboratory

Modified from material developed by Lawrence Livermore National Laboratory
(Education and Training Division of Hazards Control,
UCRL-MI-139474-HS4258).

JULY 2004

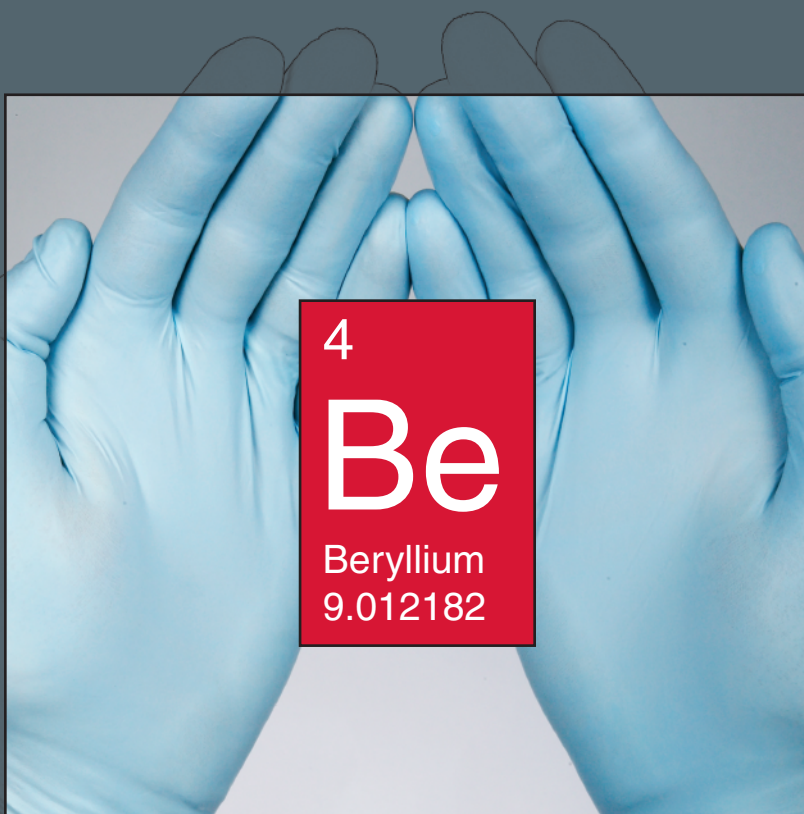

I																		VIII																	
H																		He																	
Hydrogen 1.00794																		Helium 4.002602																	
IIA																		IIIB																	
3 Li 6.941																		4 Be 9.012182																	
Lithium 6.941																		Beryllium 9.012182																	
PERIODIC TABLE OF THE ELEMENTS																																			
11 Na 22.989770																		12 Mg 24.3050																	
Sodium 22.989770																		Magnesium 24.3050																	
13 Al 26.981538																		14 Si 28.0855																	
Aluminum 26.981538																		Silicon 28.0855																	
15 P 30.973761																		16 S 32.066																	
Phosphorus 30.973761																		Sulfur 32.066																	
17 Cl 35.4527																		18 Ar 39.948																	
Chlorine 35.4527																		Argon 39.948																	
19 K 39.0983																		20 Ca 40.078																	
Potassium 39.0983																		Calcium 40.078																	
21 Sc 44.955910																		22 Ti 47.867																	
Scandium 44.955910																		Titanium 47.867																	
23 V 50.9415																		24 Cr 51.9961																	
Vanadium 50.9415																		Chromium 51.9961																	
25 Mn 54.938049																		26 Fe 55.845																	
Manganese 54.938049																		Iron 55.845																	
27 Co 58.933200																		28 Ni 58.6934																	
Cobalt 58.933200																		Nickel 58.6934																	
29 Cu 63.546																		30 Zn 65.39																	
Copper 63.546																		Zinc 65.39																	
31 Ga 69.723																		32 Ge 72.61																	
Gallium 69.723																		Germanium 72.61																	
33 As 74.92160																		34 Se 78.96																	
Arsenic 74.92160																		Selenium 78.96																	
35 Br 79.904																		36 Kr 83.80																	
Bromine 79.904																		Krypton 83.80																	
37 Rb 85.4678																		38 Sr 87.62																	
Rubidium 85.4678																		Strontium 87.62																	
39 Y 88.90585																		40 Zr 91.224																	
Yttrium 88.90585																		Zirconium 91.224																	
41 Nb 92.90638																		42 Mo 95.94																	
Niobium 92.90638																		Molybdenum 95.94																	
43 Tc 97.907215																		44 Ru 101.07																	
Technetium 97.907215																		Ruthenium 101.07																	
45 Rh 102.90550																		46 Pd 106.42																	
Rhodium 102.90550																		Palladium 106.42																	
47 Ag 107.8682																		48 Cd 112.411																	
Silver 107.8682																		Cadmium 112.411																	
49 In 114.818																		50 Sn 118.710																	
Indium 114.818																		Tin 118.710																	
51 Sb 121.760																		52 Te 127.60																	
Antimony 121.760																		Tellurium 127.60																	
53 I 126.90447																		54 Xe 131.29																	
Iodine 126.90447																		Xenon 131.29																	
55 Cs 132.90545																		56 Ba 137.327																	
Cesium 132.90545																		Barium 137.327																	
57 La 138.90471																		58 Ce 140.12																	
Lanthanum 138.90471																		Cerium 140.12																	
59 Pr 140.90768																		60 Nd 144.24																	
Praseodymium 140.90768																		Neodymium 144.24																	
61 Pm 144.912745																		62 Sm 150.36																	
Promethium 144.912745																		Samarium 150.36																	
63 Eu 151.964																		64 Gd 157.25																	
Europium 151.964																		Gadolinium 157.25																	
65 Tb 158.92534																		66 Dy 162.50																	
Terbium 158.92534																		Dysprosium 162.50																	
67 Ho 164.93032																		68 Er 167.26																	
Holmium 164.93032																		Erbium 167.26																	
69 Tm 168.93421																		70 Yb 173.04																	
Thulium 168.93421																		Ytterbium 173.04																	
71 Lu 174.967																		72 Hf 178.49																	
Lutetium 174.967																		Hafnium 178.49																	
73 Ta 180.94735																		74 W 183.84																	
Tantalum 180.94735																		Tungsten 183.84																	
75 Re 186.207																		76 Os 190.23																	
Rhenium 186.207																		Osmium 190.23																	
77 Ir 192.222																		78 Pt 195.08																	
Iridium 192.222																		Platinum 195.08																	
79 Au 196.96657																		80 Hg 200.59																	
Gold 196.96657																		Mercury 200.59																	
81 Tl 204.3833																		82 Pb 207.2																	
Thallium 204.3833																		Lead 207.2																	
83 Bi 208.9804																		84 Po 209																	
Bismuth 208.9804																		Polonium 209																	
85 At 210																		86 Rn 222																	
Astatine 210																		Radon 222																	
87 Fr 223																		88 Ra 226																	
Francium 223																		Radium 226																	
89 Ac 227																		90 Th 232																	
Actinium 227																		Thorium 232																	
91 Pa 231																		92 U 238																	
Protactinium 231																		Uranium 238																	
93 Np 237																		94 Pu 244																	
Neptunium 237																		Plutonium 244																	
95 Am 243																		96 Cm 247																	
Americium 243																		Curium 247																	
97 Bk 247																		98 Cf 251																	
Berkelium 247																		Californium 251																	
99 Es 252																		100 Fm 257																	
Einsteinium 252																		Fermium 257																	
101 Md 258																		102 No 259																	
Mendelevium 258																		Nobelium 259																	
103 Lr 260																		104 Rf 261																	
Lawrencium 260																		Rutherfordium 261																	
105 Db 262																		106 Sg 263																	
Dubnium 262																		Seaborgium 263																	
107 Bh 264																		108 Hs 265																	
Bohrium 264																		Hassium 265																	
109 Mt 266																		110 Ds 267																	
Meitnerium 266																		Darmstadtium 267																	
111 Nh 268																		112 Fl 269																	
Nihonium 268																		Flerovium 269																	
113 Mc 270																		114 Lv 271																	
Moscovium 270																		Livermorium 271																	
115 Ts 272																		116 Og 274																	
Tennessine 272																		Oganesson 274																	

INTRODUCTION

This pamphlet is intended to familiarize all Laboratory employees and the guests with the potential hazards of beryllium metal, beryllium compounds, and beryllium-containing materials, and Berkeley Lab resources available to ensure all beryllium operations are conducted safely.

Beryllium is a naturally occurring metal with many industrial and R&D applications, particularly in the aerospace, nuclear, electronics, and automotive arenas. Despite its benefits, serious health problems are caused by exposure to airborne beryllium particles. The most common of these is a respiratory disease known as Chronic Beryllium Disease, or CBD.


Although current and projected uses of beryllium at Berkeley Lab are primarily limited to research and therefore pose a relatively low degree of risk compared to industrial or machining operations involving beryllium, everyone on site must be made fully aware of what the risks are. This pamphlet looks at these risks and how to safeguard against exposure (especially for those working with beryllium or in areas where beryllium may be present), as well as at the characteristics of beryllium and its applications.

WHAT IS BERYLLIUM?

Beryllium is a silver-gray metallic element that occurs naturally in about 30 minerals. It is the second lightest of the metals (lighter than aluminum), but is stiffer than steel. It has a high melting point, conducts heat well, and is corrosion resistant. Beryllium-containing minerals are found in rocks, coal, oil, soil, and volcanic dust. It is 46th in natural abundance in the Earth's crust, slightly more than uranium or tin. Beryllium is a key element in gems such as blue-green aquamarines and green emeralds.

MANY PRODUCTS AND PROCESSES USE BERYLLIUM

Beryllium metal has been used in industrial processes and products since the late 1950s. Both structural and instrument-grade beryllium-containing materials are manufactured, especially for the aerospace and defense industries, as well as for use in some research and development (R&D) applications, including windshield frames and other structures in high-speed aircraft and space vehicles; aircraft and space shuttle brakes; neutron moderators or reflectors in nuclear reactors; x-ray windows (such as those used at the Advanced Light Source); nuclear weapons components; nonsparking tools and springs (beryllium-copper alloy); and foil targets for accelerator experiments.



If your work at LBNL may involve handling or using beryllium, beryllium compounds, or beryllium-containing materials, it is essential that you contact the LBNL Beryllium Program Coordinator at x6571 or visit the Lab's Beryllium Safety web site (www.lbl.gov/ehs/ih/beryllium.shtml) to get assistance in evaluating your operation(s) and applicable controls.

MANY PRODUCTS IN THE HOME CONTAIN BERYLLIUM



In addition to industrial and R&D applications, beryllium alloys and compounds are used in products found in the home. Some examples are bicycles (more expensive models), golf clubs, jewelry, computer parts, air bags in automobiles, dental bridges, and television components.

Fortunately, none of these products poses a health risk. Beryllium in block form is not harmful and can be safely held in your hand. For example, a hand tool made of beryllium is perfectly safe to use.

BERYLLIUM HEALTH HAZARDS

Although a very useful material, beryllium does have drawbacks. It is expensive and brittle to work with in some applications. Most important, it is toxic under certain conditions and in certain forms.


Unless ventilation and/or other controls are used, small particles or chips of insoluble beryllium-containing materials that break off during machining and other processes can spread through the air in the work area. Inhalation of these microscopic particles into the lungs, or even skin exposure to these particles, can lead to three health problems:

- 
- 
1. ACUTE BERYLLIUM DISEASE
 2. BERYLLIUM SENSITIVITY
 3. CHRONIC BERYLLIUM DISEASE

However, the mere presence of beryllium or beryllium-containing materials is not a health hazard. The hazard occurs if there is a possibility that beryllium particulate matter, i.e., particles or chips, will be generated or may be present.

Berkeley Lab's Beryllium Windows

Beryllium is a very good transmitter of x-rays. Because of this, Berkeley Lab's Advanced Light Source, which generates ultraviolet and soft x-ray beams for scientific and technological

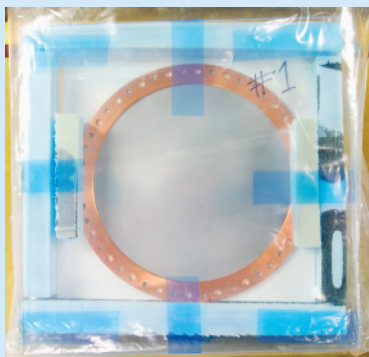

research, uses beryllium windows to pass photons from high-vacuum to atmospheric pressure environments. Beryllium transmits x-rays well, has good thermal conductivity, and is relatively strong. However, corrosion can compromise the integrity of beryllium windows, so if a window does break, please do not clean it up by yourself. Instead, call the Beryllium Program Coordinator at x6571 to assist in proper clean up.

ACUTE BERYLLIUM DISEASE

In the 1940s and 1950s, it was discovered that workers who breathed air having very high concentrations of beryllium (many orders of magnitude above current levels) could develop a type of chemical pneumonia called acute beryllium disease. Its symptoms include coughing, burning and pain in the chest, and shortness of breath. Recovery takes a week to six months, with occasional recurrence of symptoms.

Generally, acute beryllium disease is a result of short-term, high-level exposure, and the symptoms appear within a few days or weeks. It is very unlikely that anyone working in beryllium operations today would be exposed to concentrations high enough to cause acute beryllium disease, as engineering controls and practices are much improved. However, be aware of this hazard.

BERYLLIUM SENSITIVITY


Exposure to beryllium dust may cause sensitization, an immune system response to beryllium. Individuals who are sensitized to beryllium have white blood cells in the blood or lungs that react to beryllium. This reaction may be present in workers who have no lung disease. Medical studies have shown that even small amounts of beryllium particles breathed deeply into the lungs may trigger this sensitivity in 2 to 5 percent of the people exposed. In studies of people in certain occupations where exposure to beryllium is greatest (for example, machinists in beryllium operations), this figure rises to as high as 10 to 14 percent.

Currently, there is no available test to determine who is at risk for becoming sensitive to beryllium. Blood tests can only indicate those individuals already sensitized to beryllium.

CHRONIC BERYLLIUM DISEASE

Individuals who have become allergic or sensitized to beryllium can have Chronic Beryllium Disease (CBD). As with beryllium sensitivity, these individuals have white blood cells in the blood or lungs that react to beryllium, but the reaction causes the lungs to become inflamed and develop scar tissue, which can hinder the transfer of oxygen when breathing.

Although current U.S. Department of Energy (DOE) medical surveillance programs are identifying more people at the sensitization stage before they actually have CBD, some individuals already have the disease by the time they are evaluated.

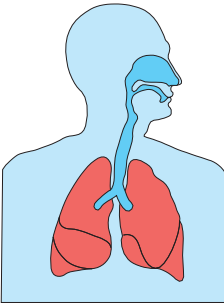

CBD CAN TAKE MANY YEARS TO DEVELOP

The average time from first beryllium exposure to the development of symptoms (latency period) of CBD is 10 to 15 years. This means you can be exposed to beryllium today and not suffer any health effects for decades. Health effects can appear a few months after exposure in some people, but can take as long as 30 years to show up in others. Doctors and researchers believe that some individuals lived with CBD and died from other causes without even knowing they had it.

At this time, there is no way to determine who is susceptible to beryllium prior to exposure. DOE and Berkeley Lab assume that all workers may be susceptible, so have implemented controls to protect everyone.

SYMPTOMS OF CHRONIC BERYLLIUM DISEASE

CBD symptoms resemble those of other lung diseases, particularly a disease called sarcoidosis. Studies have found that in some cases doctors have misdiagnosed CBD as sarcoidosis or other diseases. Symptoms of CBD may include:

→ PERSISTENT COUGHING
SHORTNESS OF BREATH WITH PHYSICAL EXERTION
FATIGUE
CHEST AND JOINT PAIN
BLOOD IN THE SPUTUM (SPUTUM IS SALIVA, MUCUS, AND OTHER DISCHARGES THAT CAN BE COUGHED UP FROM THE RESPIRATORY SYSTEM)
RAPID HEART RATE
LOSS OF APPETITE
FEVERS AND NIGHT SWEATS

A true diagnosis of CBD can only be made through medical tests specific for beryllium disease. CBD is rare, and it is unlikely that a person exhibiting the above symptoms actually has the disease.

BERYLLIUM USE AT BERKELEY LAB

Beryllium is used on site in R&D applications. These operations are primarily short term, small scale, and pose a relatively low risk of exposure. R&D operations at Berkeley Lab include ultraviolet irradiation of silicon wafers with beryllium coating; implanting carbon atoms in a foil of beryllium; and incorporation of beryllium oxide in microchip hybrids and conductors.

Machining of beryllium metal, which has the potential to generate beryllium particulate, was discontinued at Berkeley Lab in 1985. The machine shop in Building 77, the site of this activity, was formally decontaminated and decommissioned in 2000. Therefore, no operations of this type exist at Berkeley Lab.

Current Beryllium R&D Use at Berkeley Lab.



Electrical Discharge Machine from Building 77 Machine Shop.


CONTROLLING BERYLLIUM EXPOSURE

Berkeley Lab and DOE have mandated that exposure to beryllium particles, dust, and fumes be minimized to the greatest extent possible. The best defense is simply to not use or handle beryllium or be present in areas where beryllium is used. Since this is not always possible, Berkeley Lab uses the following three types of controls to ensure employee safety and minimize beryllium exposure to anyone entering beryllium work areas or working around beryllium: engineering controls, administrative controls, and personal protective equipment.

ENGINEERING CONTROLS

Engineering controls are the most effective employee protection as they involve designing equipment and facilities to physically prevent any beryllium particles from entering the atmosphere. Examples of engineering controls include enclosing all beryllium work, employing exhaust hoods and high-efficiency particulate air (HEPA) filters for all operations where beryllium particulate might be generated, not grinding or sharpening beryllium-copper non-sparking tools, reordering replacements when beryllium alloy tools lose their shape, or substituting with a different alloy (aluminum/bronze) that has nonsparking properties.

Fume Hood (left) and Enclosure (right) — two types of engineering controls.

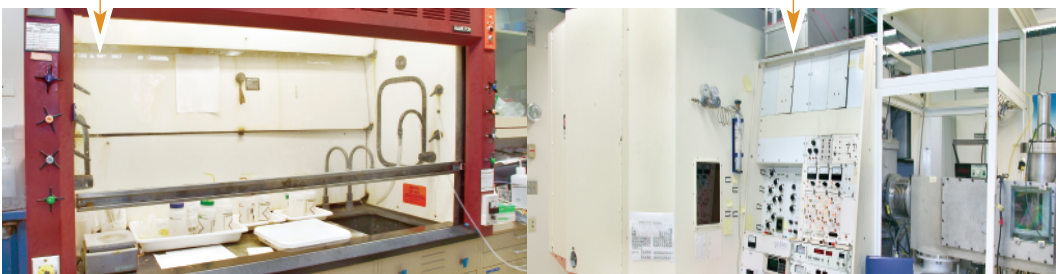

ADMINISTRATIVE CONTROLS

➔ **Contact the Beryllium Program Coordinator at x6571 or visit the Lab's Beryllium Safety web site (www.lbl.gov/ehs/ih/beryllium.shtml) to get assistance in evaluating your beryllium use, posting required signs, and establishing appropriate controls.**


Post signs where beryllium is used. Always obey these signs.

Treat beryllium-contaminated hazardous waste.

Personnel who work with beryllium metal, alloys, and/or beryllium-containing compounds must complete Beryllium Hazard Communication Training (EHS0342).

Prepurchase approval by the Environment, Health & Safety Division (EH&S) on all orders of beryllium or beryllium-containing items such as alloys (even those containing as little as 1–2 % beryllium).

If there is any likelihood of exposure to airborne particles of beryllium in the course of their work, employees must enroll in the Berkeley Lab Medical Surveillance Program for Beryllium. Contact Health Services at x6266 for more information.



DANGER

**BERYLLIUM CAN CAUSE
LUNG DAMAGE
CANCER HAZARD
AUTHORIZED PERSONNEL
ONLY**

HCL 800/421-6710

WWW.HCLCO.COM

CS-034

This sign would be posted in an area where potential exposure might exceed the Berkeley Lab action level of 0.2 micrograms of beryllium per cubic meter of air.



CAUTION

**BERYLLIUM CONTAMINATION
INHALATION OF DUSTS OR FUMES MAY CAUSE
SERIOUS CHRONIC LUNG DISEASE**


THIS EQUIPMENT WAS KNOWN TO HAVE BEEN USED FOR BERYLLIUM OPERATIONS AND MAY BE INTERNALLY CONTAMINATED. IF THE INTERNAL COMPONENTS OF THIS EQUIPMENT ARE BREACHED, WORKERS MUST BE PROTECTED ACCORDANCE WITH APPLICABLE OSHA STANDARDS. SURVEYS WERE PERFORMED TO DETERMINE THE LEVELS OF EXTERNAL CONTAMINATION. SURVEY RESULTS ARE PACKAGED WITH THE EQUIPMENT. PLEASE CONTACT BERKELEY LABORATORY EH&S AT (510) 486-5514 IF YOU HAVE ANY QUESTIONS OR CONCERNS REGARDING FUTURE USE OF THIS EQUIPMENT.

HCL 800/421-6710

WWW.HCLCO.COM

S64C-01-1101

Beryllium Contamination Label. This label indicates a machine or piece of equipment that was used in a beryllium operation. Handle it carefully, especially if you plan to take it apart.



DANGER

**CONTAMINATED WITH BERYLLIUM
DO NOT REMOVE DUST BY BLOWING OR
SHAKING
CANCER AND LUNG DISEASE HAZARD
(Concerns or questions, please contact Berkeley
Laboratory EH&S at 510-486-5514)**

HCL 800/421-6710

WWW.HCLCO.COM

S32C-01-1101

Beryllium Content Label. You might see this label on a container of beryllium, beryllium compounds, or beryllium-contaminated clothing, equipment, scraps, or debris. **DO NOT HANDLE** unless it is part of your job and you have completed the proper training, Beryllium Hazard Communication (EHS0342). At this time, there is no requirement to label premanufactured, unaltered beryllium items or articles (such as nonsparking tools or springs) that are used for their original purpose.

PERSONAL PROTECTIVE EQUIPMENT

Personal protective equipment is also used to protect people from the harmful effects of beryllium. Some examples are respirators, gloves, and lab coats.

Not only does this equipment help protect workers, it also helps prevent the transport of beryllium outside the work area where others could be exposed.

It should be noted that in laboratory operations involving beryllium, respirators are generally not necessary as long as the operation is confined to a properly functioning ventilation device (such as a fume hood).



BERYLLIUM PREVENTION PROGRAM

The U.S. Department of Energy has mandated that all DOE sites with beryllium activities institute a Chronic Beryllium Disease Prevention Program (CBDPP). A copy of the CBDPP plan for Berkeley Lab can be obtained by contacting the Berkeley Lab Beryllium Coordinator, at x6571, or you can view it on the Web at: www.lbl.gov/ehs/ih/cbdpp.pdf.

The plan provides details about Berkeley Lab's program to minimize personnel exposure to beryllium, including provisions on exposure monitoring, housekeeping, medical surveillance, and training.

ISM AND BERYLLIUM

ISM, which stands for "Integrated Safety Management," is a Laboratory-wide work safety system that requires each employee to define the scope of work, evaluate the hazards associated with that work, then implement controls for those hazards. In defining the scope of a job task, if you find the task takes you into or near an area where beryllium or beryllium-containing items are located, check with your supervisor or your Industrial Hygienist (see the list of Industrial Hygienists at: www.lbl.gov/ehs/ih/ih_members.shtml) for help in determining what, if any, measures or controls need to be taken to protect you and your coworkers.

MORE INFORMATION

➤ *If you plan to work with beryllium or have questions about your current use . . .*

Visit the LBNL Beryllium Safety web site

www.lbl.gov/ehs/ih/beryllium.shtml

Contact your Industrial Hygienist

www.lbl.gov/ehs/ih/ih_members.shtml

Contact the Beryllium Program Coordinator at x6571

Take the Beryllium Hazard Communication course

ehswprod.lbl.gov/EHSTraining/BE

Download Berkeley Lab's Chronic Beryllium Disease Prevention Program

www.lbl.gov/ehs/ih/cbdpp.pdf

If you think you have been exposed to beryllium (either at Berkeley Lab or a previous job) . . .

Contact Health Services immediately at x6266

For more information on Integrated Safety Management . . .

Go to www.lbl.gov/ehs/pub811/

The following Web sites provide both historical and current information on beryllium, beryllium-related activities, and chronic beryllium disease.

UC, DOE, OSHA, AND DEPARTMENT OF LABOR

Lawrence Livermore National Laboratory's Beryllium Disease

Prevention Program: www.llnl.gov/Be-prevention/home.html

U.S. Department of Energy Chronic Beryllium Disease Prevention Program:

tis-nt.eh.doe.gov/be/

Occupational Safety & Health Administration Hazard Information Bulletins:

www.osha-slc.gov/dts/hib/hib_data/hib19990902.html

U.S. Department of Labor—Office of Workers' Compensation Programs,

Division of Energy Employees Occupational Illness Compensation:

www.dol.gov/esa/regs/compliance/owcp/eeoicp/main.htm

ELEMENTAL AND INDUSTRIAL BERYLLIUM INFORMATION

Web Elements Periodic Table: www.WebElements.com/WebElements.html

Brush-Wellman Web Site, Manufacturer of Beryllium-Copper Alloys:

www.brushwellman.com/index.asp

Brush-Wellman Beryllium Facts Page: www.befacts.com/

This document was prepared as an account of work sponsored by the United States Government. While this document is believed to contain correct information, neither the United States Government nor any agency thereof, nor The Regents of the University of California, nor any of their employees, makes any warranty, express or implied, or assumes any legal responsibility for the accuracy, completeness, or usefulness of any information, apparatus, product, or process disclosed, or represents that its use would not infringe privately owned rights. Reference herein to any specific commercial product, process, or service by its trade name, trademark, manufacturer, or otherwise, does not necessarily constitute or imply its endorsement, recommendation, or favoring by the United States Government or any agency thereof, or The Regents of the University of California. The views and opinions of authors expressed herein do not necessarily state or reflect those of the United States Government or any agency thereof, or The Regents of the University of California.

This work was supported by the Office of Science of the U.S. Department of Energy
under Contract No. DE-AC03-76SF00098.

